SENCOR®

Let's live!

LED Television

SLE 3282M4

USER'S MANUAL

EN

CAREFULLY READ THIS USER'S MANUAL BEFORE PUTTING THE TELEVISION INTO OPERATION. KEEP IT FOR FUTURE USE. RECORD THE MODEL NUMBER AND THE SERIAL NUMBER OF THE TELEVISION. SEE THE LABEL ON THE REAR COVER AND PROVIDE THIS INFORMATION TO YOUR VENDOR IN THE EVENT THAT YOU REQUIRE REPAIRS.

Contents

Important safety conditions 3

1. Introduction 10

    1.1. Installing the stand 10

    1.2. Installation location of the TV 11

    1.3. Mounting on the wall 11

2. Description of the appliance 12

3. Remote control 14

4. Connection 18

    4.1. Connecting to a power socket 18

    4.2. Supported signals 18

5. Basic controls 19

    5.1. Turning on 19

    5.2. Selecting an input source 19

    5.3. Selecting a channel 19

    5.4. Setting the volume and the MUTE button 20

    5.5. Information about the current channel 20

    5.6. EPG menu 20

Copyright © 2015, Fast ČR, a. s.

6. TV menu 21
6.1. Using the menus 21
6.2. Picture menu (Picture) 21
6.3. Sound menu (Sound) 22
6.4. Function (Functions) menu 24
6.5. Time menu (TIME) 28
6.6. Option menu (Options)
6.7. Lock menu (Lock) 30
6.8. Channel menu (Channel) 31
7. Network configuration 34
8. Internet 37
8.1 YouTube 37
8.2. Facebook 38
8.3. Twitter 39
8.4. Picasa 40
8.5. DLNA 41
9. Digital player 42
10. Care and maintenance 43
11. Troubleshooting 44
12. Technical specifications 46

Copyright © 2015, Fast ČR, a. s.

Important safety conditions

If you want to use this product correctly, carefully read this user's manual and store it for future reference. If you give (sell) the appliance to somebody, please also include all the documentation together with this appliance, including this instruction manual.

The flash symbol in an equilateral triangle indicates that there is dangerous voltage inside this appliance, which presents a risk of injury by electrical shock.

To reduce the risk of injury by electrical shock do not remove the cover (or the rear side). There are no components inside which the user can repair. Have all repairs or adjustments performed at an authorised service centre.

The exclamation mark in an equilateral triangle symbol indicates important operating or servicing instructions in the appliance's documentation.

General safety instructions

- Carefully read this manual before using the appliance. Follow the instructions contained in this user's manual.
- Heed all warnings.
- Adhere to all instructions.
- Use only accessories determined by the manufacturer.
- **AN OPEN FLAME MUST NOT BE PLACED ON THE APPLIANCE, E.G. A BURNING CANDLE. DO NOT PLACE HOT ITEMS OR OBJECTS WITH AN OPEN FLAME E.G. CANDLES OR NIGHT LAMPS ON OR IN THE VICINITY OF THE APPLIANCE. HIGH TEMPERATURES MAY MELT PLASTIC PARTS AND CAUSE A FIRE.**
- Use the appliance in a temperate climate zone.
- Neither the manufacturer nor the seller of the appliance under no condition takes responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, service or cleaning of this appliance as described in this user's manual.
- Protect the appliance against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.
- Before allowing children to use the appliance, they must be appropriately to their age, informed about the correct and safe use of the player.
- If the appliance is equipped with a headphone jack, do not use headphones set to an extreme volume. There is a danger of hearing damage or loss.

Copyright © 2015, Fast ČR, a. s.

Installation, operation

- Install the appliance according to the instructions in the user's manual.
- Leave free space on all sides of the appliance, necessary for proper air circulation. This removes the heat created during operation. Covering the ventilation openings of the appliance's case creates a risk of overheating or damaging the appliance. It is necessary to ensure that the ventilation openings are not blocked, e.g. by a newspaper, table cloth, curtain, etc. Follow the installation instructions in the user's manual.
- This appliance should not be located in a confined area such as a bookshelf or rack, if sufficient ventilation is not provided for or the instructions of the manufacturer are not followed.
- Never insert any items into any ventilation or other openings because they could come into contact with points with dangerous voltage levels or cause a short circuit of parts, which could cause a fire or injury by electric shock. Never pour any liquid into the appliance.
- Do not install the appliance in direct sunlight or near sources of heat, such as heaters, heat exchangers, stoves or other appliances (including amplifiers) producing heat. High temperatures significantly reduce the lifetime of electronic components in the appliance. Do not use or leave the appliance in the vicinity of an open fire.
- The appliance must not be exposed to dripping or running water and objects filled with water must not be placed on it, e.g. vases. Protect the appliance against rain, spray or contact with any other liquid, do not leave or install the appliance outdoors. Do not use the appliance outdoors. Not adhering to these instructions creates a risk of electrical shock or fire hazard.
- Do not use this appliance near water.
- Treat the glass panel and appliance cover with care. The screen glass can break on impact and cause serious injuries.
- Make sure that the power cord is not stepped on or compressed, particularly near the power plug, power socket and at the point where it exits the appliance or the adapter. The power plug (adapter) is used as a disconnection device and must be easily accessible.
- Never use a appliance with a damaged power cord or plug. If the power cord or plug are damaged, turn off the appliance, disconnect it from the power source and contact an authorised service centre. A damaged power cord or plug may only be replaced by qualified personnel. Under no circumstances attempt to replace the power cord or plug yourself.
- Do not attempt to circumvent the polarised power plug safety feature. If the power plug cannot be inserted into your power socket, contact a qualified electrician to replace the old type of power socket.
- Before connecting the appliance into a power socket, check that the voltage in your power socket corresponds to the voltage on the rating label of the appliance or on its power adapter. If you are not certain about the type of the power sources in your home, contact your vendor or the local energy company.
- Before turning on the appliance, check that the electrical connection is performed properly and in accordance with the instructions of the manufacturer. Before connecting or changing the connection, turn off the appliance and disconnect it from the mains.

Copyright © 2015, Fast ČR, a. s.

- Remember to always disconnect the power plug (adapter) from the power socket before disconnecting the power cable from the back side of the appliance.
- Insert the power plug into a independent power socket. Do not overload wall sockets with extension cords or multi-socket adapters. There is a risk of injury by electric shock.
- When disconnecting, hold the power cord by the plug and not by the cord itself.
- Disconnect the appliance from the power socket during storms or if you will not be using it for a longer time.
- Avoid moving the appliance from a cold environment to a warm one or vice versa, or when using the appliance in a very humid environment. Air humidity may condense on some components inside the case of the appliance and the appliance may stop working temporarily. If this occurs leave the appliance in a warm and well ventilated place and wait 1 – 2 hours until the moisture evaporates and the appliance can once more be used as usual. Take care especially during the first use of the appliance immediately after its purchase during a cold season.
- Do not place this appliance on an unstable cart, pedestal, stand, bracket or table. The appliance could fall and cause serious injuries to children or adults or could be seriously damaged or damage other items. Only use the appliance with a cart, pedestal, stand or table designated by the manufacturer or sold with the appliance. Any mounting of the appliance should be carried out according to the manufacturer's instructions and the mounting accessories recommended by the manufacturer should be used.
- Do not lean on the appliance, do not lean over it or use it as a step. Protect it against violent movements. Ensure that children do not play with the appliance.
- If using the cart, be careful when moving it. Stopping suddenly, excessive force and uneven surfaces could cause the cart to fall over with the appliance.
- Neither the manufacturer nor the seller of the appliance under no condition takes responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, service or cleaning of this appliance as described in this user's manual.
- Protect the appliance against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.
- Do not expose the appliance to extreme temperatures or humid conditions.

Note:
If the appliance is powered by an adapter, use only the adapter and AC power cord supplied with the appliance. Do not use faulty power sockets. Check that the power plug is properly inserted into the power socket. If the power plug is loose, arching could result in a fire. Contact a qualified electrician to have your socket replaced.

Note:
Only connect the appliance to a properly grounded socket with a protective grounding pin.

Note:
If you will be installing the appliance on a wall or to the ceiling, follow the manufacturer's instruction found in the user's manual of the particular appliance.

Copyright © 2015, Fast ČR, a. s.

Repairs and maintenance

- To prevent risk of injury through electrical shock or the creation of a fire, do not take the appliance out of the case - there are no parts inside the case repairable or adjustable by the user without relevant equipment and qualifications. Should the appliance require adjustment or repair, contact a professional service centre.
- In the case of any unusual events occurring during the use of the appliance, e.g. if there is a distinct smell of burning insulation or smoke comes out of the appliance, immediately turn off the appliance, disconnect the appliance from the power source and do not use the appliance until you have received the results of an inspection by the employees of a professional service centre.
- Have all repairs carried out by qualified personnel. Repairs are necessary if the appliance has been damaged in any way, for example if the power cord is damaged, liquid was poured on the appliance, foreign objects have entered the appliance, the appliance has been exposed to rain or moisture, if the appliance is not working as usual or if it has fallen.
- In the event of repair or replacement of a part of the appliance, ensure that the service technician uses components designated by the manufacturer or that these components have the same specifications as the original ones. Unauthorised replacements could cause a fire, lead to a danger of injury by electrical shock or other dangers.
- Before cleaning, carrying or other maintenance, disconnect the plug (adapter) from the power socket.
- Clean the appliance only with a dry cloth.
- For cleaning do not use petrol, thinners or any other solvents or use any abrasive cleaning agents, steel wool or any sponges with steel wool.

Note:
Do not throw the appliance into ordinary household waste. For disposal follow all local laws and regulations.

Remote control and batteries

- Do not expose the remote control or the batteries to direct sunlight or sources of heat, such as heaters, heat exchangers, stoves or other appliances (including amplifiers) that produce heat. Do not use or leave the appliance in the vicinity of an open fire.
- Ensure that the sensor is not exposed to a strong light source (e.g. sunlight) or light from fluorescent light tubes, which could reduce the effectiveness and reliability of the remote control.
- Neither the remote control nor the batteries may be exposed to dripping or running water and objects filled with water must not be placed on them, e.g. vases. Protect against exposure to rain, spraying or pouring of any kind of liquid. Do not use outdoors. Not following these instructions creates a danger of damage to the remote control or the battery.

Copyright © 2015, Fast ČR, a. s.

- Do not use this appliance near water.
- It is necessary pay attention to the environmental impact aspects of battery disposal.
- The incorrect use of batteries may cause the leakage of the electrolyte and corrosion. To ensure that the remote control works correctly, proceed according to the instructions below:
  - Do not insert the batteries in the wrong orientation.
  - Do not recharge, heat, open or short circuit the batteries.
  - Do not throw batteries into a fire.
  - Do not leave discharged batteries in the remote control.
  - Do not combine various types of batteries or new and old batteries.
  - If you will not be using the remote control for a long period of time, remove the batteries to prevent potential damage caused by a subsequent battery leakage.
  - If the remote control is not working correctly or its operational range is reduced, change all batteries for new ones.
  - If electrolyte leaks out from the batteries, have the remote control cleaned by an authorised service centre.

ATTENTION
To prevent a fire hazard or injury by electrical shock, do not expose this appliance to rain or humidity.

ATTENTION
Batteries must not be exposed to excessive heat, for example sunlight, fire, etc.

Copyright © 2015, Fast ČR, a. s.

Supplement to the LCD screen user's manual

SENCOR®

Warning about displaying static images, red/blue/ green pixels on the screen.

Displaying a static image may cause permanent damage to the LCD panel.

- Do not display a static image on an LCD screen for longer than 2 hours as the image may remain in the picture of the screen. This permanent picture is called "screen burn-in". To prevent such permanent images, lower the brightness and contrast level on the screen when viewing a static image.
- A similar effect "image burn in" may occur on an LCD panel because of a permanently displayed television station logo.
- Viewing pictures in formats 4:3, 16:9 or similar modes, which do not cover the entire screen for an extended period of time may leave display marks on the left, right side or in the middle of the screen, caused by the differing light level on the screen. Playing a DVD or image from a game console can cause a similar effect on the screen.
- Displaying a static image of video games and from a computer for an extended period of time may cause partial image remains. To prevent this effect from occurring lower the brightness and contrast when displaying a static frame.

Damage resulting from the above mentioned causes is not covered by the warranty!

Red, blue, green and black pixels may appear on the screen.

- This is characteristic for liquid crystals and is not considered to be a problem. Liquid crystal panels are manufactured using a very precise technology bringing very fine image details. Occasionally inactive pixels may appear on the screen as permanent black, green, blue or red pixels (maximum 0.001% of the total number of pixels). Please take note that this does not affect the performance of the LCD screen.

Copyright © 2015, Fast ČR, a. s.
Revision 01/2015

Comments about USB connectors:

- USB flash drives must be inserted into the appliance directly. To prevent data transmission failure or its interference do not use USB extension cables. Electrostatic discharges may cause the appliance to malfunction. In such an event the user must restart the appliance.
- Before using a USB flash drive test its ability to communicate with the appliance and its data reading and writing speed.
- To achieve maximum reading speed we recommend that you keep disk space defragmented. Use the FAT32 file system, a single partition, without protection. If reading and writing on the USB flash disk is not continuous, undesirable effects may occur such as partial image loss (distortions/checkering effects) or complete image loss, audio defects, and in extreme cases the operation will be stopped. Unexpected behaviour of the connected flash drive, or the presence of viruses or other damaging software may cause the functions of the appliance to stop working, necessitating a restart.
- The USB connector is the standard type and is not able to power a USB device with a high power usage (e.g. hard disk drives HDD). Use devices with independent power supplies and power them from their own power supplies.
- The appliance was designed to achieve maximum compatibility with flash drives. With respect to the variety of devices on the market it is not possible to guarantee compatibility with every USB device. In the event of difficulties try formatting the flash drive directly in the appliance. If problems persist, use a different flash drive.

Due to the wide range of SD/MMC/MS cards / USB devices available on the market it is not possible to guarantee the compatibility of the appliance with all SD/MMC/MS cards / USB devices.

Serial number of the appliance

The serial number of the product is unique and unequivocally identifies your appliance. Enter the serial number of your appliance together with other details necessary for the definite identification of your appliance below.

Serial number: _____

Date of purchase: _____

Copyright © 2015, Fast ČR, a. s.

1. Introduction

Thank you for purchasing our television.
Please, read the entire user's manual before installing and setting up the television – it contains important information about the optimal and safe use of all of its functions and features. Keep the user's manual in case of future need.

Basic specifications

1x antenna input connector
1x SCART input connector
1x PC input connector
1x HD YPbPr input connector
3x HDMI input connector
Audio inputs (SCART/YPbPR/AV)
1x CI input connector
1x headphone jack
1x USB slot
1x Coaxial output connector

1.1. Installing the stand

Place the TV with the display side facing downwards on to a flat surface. Use a soft cloth as an underlay, e.g. a blanket or wiping cloth. Screw the stand to the bottom part of the television. Use proportionate force, the appliance is not too heavy.

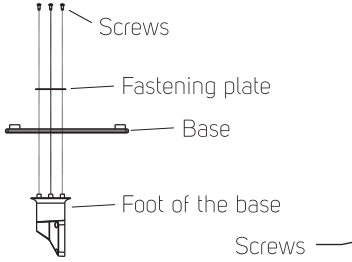

Figure 1

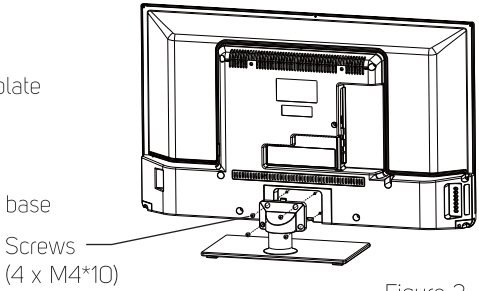

Figure 2

WARNING:
Improper handling, pulling or climbing over the television may result in it falling and subsequently to damage to property or injuries. Therefore, ensure that children do not play with the television, do not climb over it or otherwise use it in their games. Otherwise, the television or your property may be damaged or injuries may result. Also adhere to all safety notices and instructions contained in this user's manual.

Copyright © 2015, Fast ČR, a. s.

Note:
Skip this chapter if the stand is already attached to the television at the factory.

1.2. Installation location of the TV

Place the TV on a stable table in a location where it will not be exposed to direct sunlight. Provide for sufficient ventilation of the TV.
Follow the instructions in the preceding part of this user's manual – Safety instructions / Installation.

1.3. Mounting on the wall

Your television can be installed on a wall using a wall mount. **The wall mount is not included**.
Follow the instructions supplied with the wall mount when attaching the television to a wall.

Note:
Do not install the wall mount alone. Contact a professional to perform the installation. The television must be installed on the wall only based on the specifications here provided and provide in the wall mount's manual. An insufficient installation or incorrect installation may cause damage to the television, the wall mount or injury to persons.
Remove the base before mounting this television on a wall.

Copyright © 2015, Fast ČR, a. s.

2. Description of the appliance

Television control panel

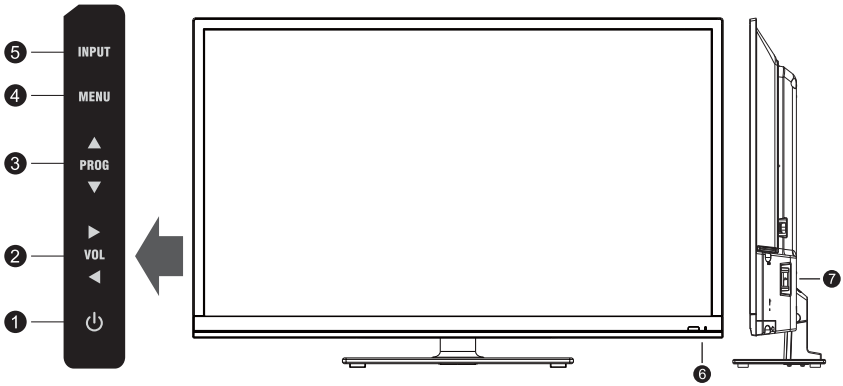

1. ⏻ **button**
   This button is used to switch between normal and standby mode.
2. **◀/▶ button**
   Volume control button. In a menu this button is used to move left or right.
3. **Channel selection button**
   Button is used to change channels. In a menu this button is used to move up or down.
4. **MENU button**
   Button is used to display the menu of your television.
5. **INPUT button**
   Switches between available input sources.
6. **Remote control sensor**
   Point the remote control at the remote control sensor.

   Power On indicator light
   Red: Standby mode
   Green: Television is turned on
7. **Main power switch**

Copyright © 2015, Fast ČR, a. s.

Rear panel

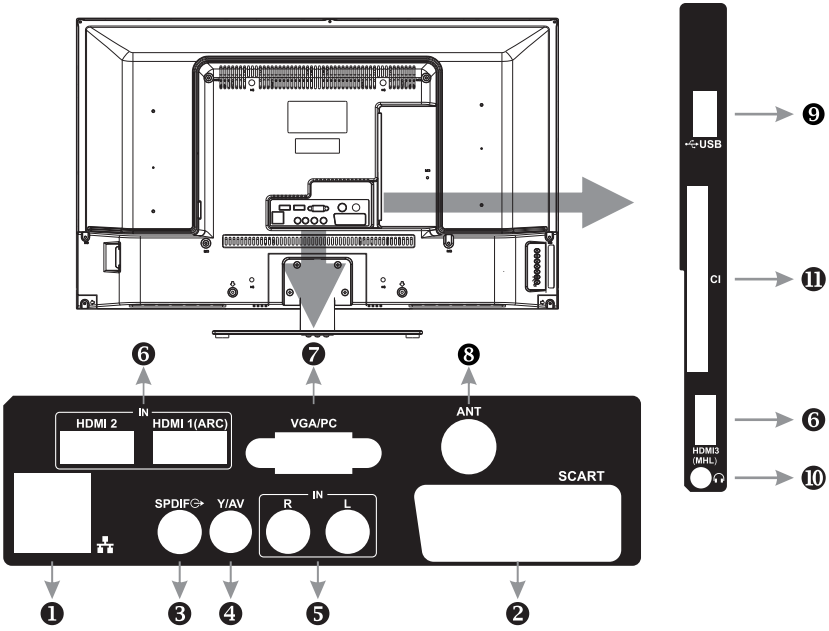

1. Internet Jack
2. SCART connector
3. Digital audio output
4. YPbPr/AV
5. Audio input
6. HDMI1/HDMI2/HDMI3
7. VGA/PC input connector
8. ANT input
9. USB slot
10. Headphone output jack
11. CI slot

Copyright © 2015, Fast ČR, a. s.

3. Remote control

Description of the remote control buttons

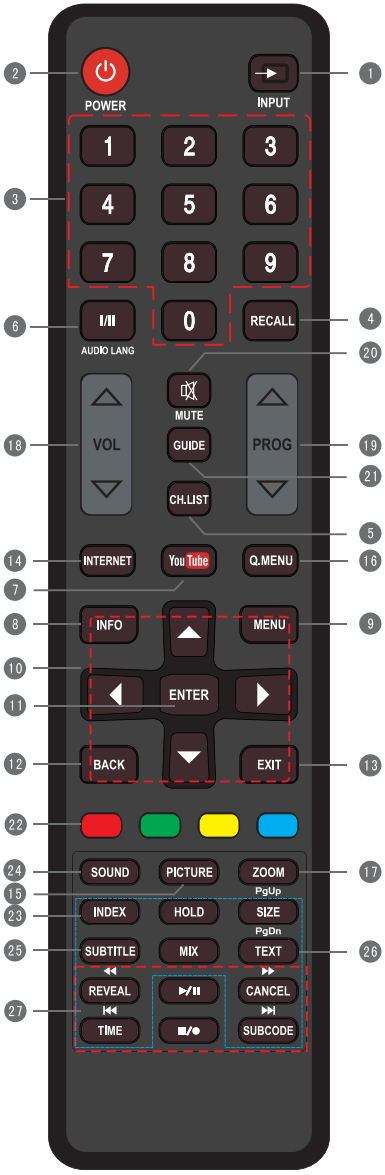

1. INPUT button: Serves to select the input signal, select a source and press this button. Press the ENTER button to confirm.
2. POWER button: Serves to turn the power on and to switch to the stand-by mode.
3. Numerical buttons (0-9): Serves to directly enter channel numbers.
4. RECALL button: Serves to switch to the last watched channel.
5. CH LIST button: Serves to display the channel list on the screen.
6. I/ II / Audio Lang button: In ATV mode it serves to set the NICAM audio system. In DTV mode it serves to set the audio system.
7. YouTube button: Serves to switch to the YouTube website.
8. INFO button: Serves to display information about a program.
9. MENU button: Serves to display the main menu or to leave the current menu.
10. Direction arrows ▲/▼/◀/▶: Serves to move in a menu and change settings of the television.
11. ENTER button: Serves to confirm a selection or setting.
12. BACK button: Serves to move a step back.
13. EXIT button: Serves to exit the current menu.
14. INTERNET button: Serves to enter the internet interface.
15. PICTURE button: Serves to select a picture mode: Sport, Normal, Fine, User.
16. Q.MENU button: Serves to switch to the quick menu.

Copyright © 2015, Fast ČR, a. s.

17. ZOOM button: Serves to zoom in or out of a picture.
18. VOL button ▽/△: Serves to set the volume.
19. PROG button ▽/△: Serves to select a channel upwards or downwards.
20. MUTE button: Serves to immediately turn off sound, when pressed again restores initial volume level.
21. GUIDE button: In DTV mode it serves to enter the EPG menu.
22. COLOURED BUTTONS: Serve to perform various functions in a menu and EPG, the red button serves to delete a channel, whereas the blue button serves to skip a channel.
23. SLEEP button: Serves to automatically turn off the television after a set time. Press this button to select the time when it will turn off: 10 min, 20 min, 30 min, 60 min, 90 min, 120 min, 180 min, 240 min and off.
24. SOUND button: Serves to select a sound mode.

(Standard) → (Music) → (Film) → (Sport) → (User)

25. SUBTITLE button: In USB mode, this button serves to turn on subtitles while a film is playing.
26. Teletext buttons: For more information, study the teletext control on the following page.
27. PLAYER CONTROL BUTTONS Are the following: Play/pause, stop, previous, next, page up, page down, rewind, fast forward in USB mode. More information in chapter about controlling the multimedia player further in the user's manual.

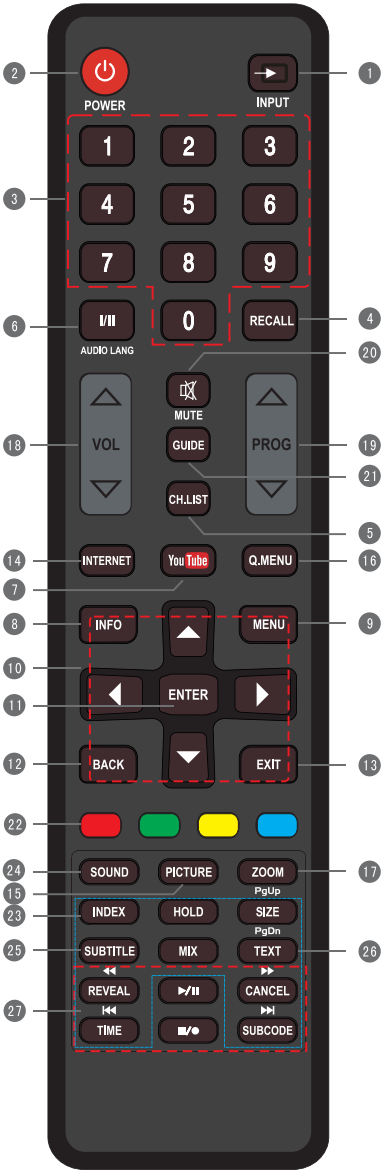

Copyright © 2015, Fast ČR, a. s.

Teletext

Teletext is an information system broadcast by certain channels, which you can read like a newspaper. It also offers access to subtitles for viewers with hearing impairments or for those who do not understand the broadcast language. Press this button to control teletext.

1. **Text button**
Serves to enter or exit the teletext mode.
2. **Hold button**
Serves to hold or release the displayed page. If the hold function is activated, the page turning function is stopped. If the hold function is deactivated, the page turning function is started.
3. **Size button**
Press the Size button once to display the top half of the screen, press the Size button twice to display the bottom half of the screen, press the Size button three times to display the whole screen in normal mode.
4. **Coloured buttons**
Serves to perform various functions on teletext pages, follow the instructions on the bottom part of the screen.
5. **Index button**
Serves to display index pages.
6. **Reveal button**
Serves to display hidden data (e.g. answers to quizzes). Press again to return to the normal screen.
7. **Cancel button**
Press the CANCEL button to exit from any teletext page on the screen. Press the CANCEL button again to exit from teletext mode and return to watching television.

Copyright © 2015, Fast ČR, a. s.

8. Subtitle button
Serves to turn teletext subtitles on or off. Subtitles are an independent mode with limited availability. Nothing else will be displayed than the teletext subtitles. In USB mode this button serves to display subtitles of a video.

9. Subcode button
Serves to display subpages if the given teletext page has such a subpage. Use the numerical buttons 0 - 9 to enter the number of the subpage. After entering the full and correct subpage number, the selected page is searched and displayed. Use the PROG ∇/△ buttons to navigate the subpages.

10. TIME button
Serves to display time in teletext.

11. Numerical buttons (0-9)
Serve to directly enter teletext pages.

12. PROG button ∇/△
Serves to navigate through teletext pages upwards or downwards.

13. Mix button
Serves to switch teletext pages from full to transparent, you will thus be able to watch a picture and read the contents of a teletext page. Press the MIX button again to exit from the Mix mode.

Inserting batteries into the remote control

If you are using the remote control for the first time or if its function has decreased, it is necessary to insert batteries, i.e. replace the batteries.

1.	Open battery compartment cover.
2.	Insert the correct type of batteries. Ensure that the correct polarity +/- is adhered to as marked on the bottom of the battery compartment.
3.	Return the cover.

Note:
Remove the batteries if you will be storing the appliance or not using it for an extended period of time.

- To control the appliance using the remote control, point the remote control at the appliance and then press the button with the required function. The effective range of the remote control is up to about 5 meters with a maximum deviation of +/- 30° from the perpendicular direction to the reception sensor of the remote control on the front side of the appliance. The falling capacity of the batteries gradually reduces the remote control range. There must be no solid obstacles in the area between the remote control and the appliance when the remote control is being used.
- During standard use the lifetime of batteries in the remote control is about 1 year. When the effective range of the remote control is substantially reduced or when there are problems with its use, change both the batteries in the remote control. If you will not be using the remote control for a longer period of time, take out both batteries - in this way you will prevent potential damage caused by their leakage.
- Prevent strong light from falling on the appliance, (e.g. sunlight or strong fluorescent lamps or ecological light bulbs), which could reduce the effectiveness and reliability of the infra-red remote control.

Copyright © 2015, Fast ČR, a. s.

4. Installation

Prior to connecting any type of external device, check that:
- you have carefully read this user's manual and the user's manual of the external device and understand all the provided instructions, safety measures and warnings.
- both appliances (television and the connected device) are turned off and their power cords have been disconnected from the mains power sockets.

Connect the power cords only after fully completing the connections.

4.1. Connecting to a power socket

Only connect the power cord plug into the power socket after performing all necessary connections.
Check that the voltage in your power socket corresponds to the voltage on the power adapter's rating label.
If you will not be using the television for a longer period of time, disconnect the plug from the power socket.

4.2. Supported signals

Input	Mode
DTV	DVB-T/DVB-C
ATV	PAL BG DK I
	SECAM DK BG
CVBS	PAL/NTSC/SECAM

Input	Resolution		Vertical frequency
PC/ VGA	VGA	640 x 480	60 Hz
	SVGA	800 x 600	60 Hz
	XGA	1024 x 768	60 Hz
	SXGA	1280 x 1024	60 Hz
		1360 x 768	60 Hz

Input	Resolution	Vertical frequency
YPbPr	480i	60 Hz
	480p	60 Hz
	576i	50 Hz
	576p	50 Hz
	720p	50/60 Hz
	1080i	50/60 Hz
	1080p	50/60 Hz
HDMI	480p	60 Hz
	720p	50/60 Hz
	1080i	50/60 Hz
	1080p	50/60 Hz

Copyright © 2015, Fast ČR, a. s.

5. Basic controls

5.1. Turning on

As soon as the appliance is placed/attached in a suitable location, on a table or on a wall, and all the necessary cables have been connected, including the power cord, do the following. Press the main power button and ⏻ on the remote control to turn on the power to the television, its LED indicator will be lit green in a short time.

5.2. Selecting an input source

Press the **INPUT** button on the remote control to enter the input source selection menu. Use the ◀/ ▶ buttons to select an input source and press the **ENTER** button to confirm.

5.3. Selecting a channel

There are 4 ways of selecting a channel:

1) Using the numerical buttons and the **ENTER** button on the remote control directly select the desired channel.
   To select channel 90, press 9 ➡ 0 ➡ ENTER.
   If you use the numerical buttons, you can directly select a channel that was either hidden or is not stored in memory.
2) Using the **PROG** ▽/△ buttons on the remote control or the control panel on the television. If you repeatedly press the **PROG** ▽/△ button, the TV will gradually switch channels. The stored channels will be displayed on the screen. However, you will not see channels that are hidden or are not stored.
3) Using the **RECALL** button you will display the previously watched channel, press again to display the current channel. To quickly switch between two channels, first select one channel, then using the numerical buttons select the second channel. Then press the **RECALL** button to switch between the selected channels. The RECALL button is not active if no channel was changed after the TV was tuned.
4) Using the channel list or the favourite channels list. Press the **ENTER** button to select a channel from the channel list.

Copyright © 2015, Fast ČR, a. s.

5.4. Setting the volume and the MUTE button

5.4.1. Setting the volume

Using the **VOL** ▽/△ button on the remote control or on the control panel of the television, set the volume from 0 to 100.

To increase the volume, press the **VOL** △ button.
To lower the volume, press the **VOL** ▽ button.

5.4.2. Mute button

Press the **MUTE** button to immediately turn off the sound. The MUTE icon will appear in the bottom left corner of the screen.
To restore the volume, press the **MUTE** button again or use the **VOL** △ button.

5.5. Information about the current channel

Press the **INFO** button on the remote control to display information about the currently watched channel. Information about the channel will appear in the following table.

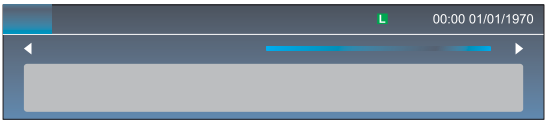

Press the **EXIT** button on the remote control to exit the menu.

5.6. EPG menu

Press the **EPG** button to enter the EPG menu, the first row will show the number of the current channel, its name, the name of the program and the current time.
The following row shows all the programs broadcast on the selected channel, press the ▲/▼ button to select the desired program, then press the **ENTER** button to watch the selected program. To mark a reminder, press the **green** button. In DTV mode the program marked with the reminder will automatically appear at the given time.

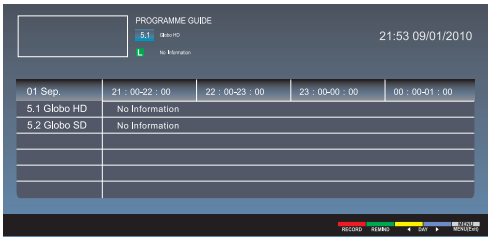

Press the **EXIT** button on the remote control to exit the menu.

Note:
The data contained in the EPG menu is the responsibility of the channel operator.

Copyright © 2015, Fast ČR, a. s.

6. TV menu

6.1. Using the menus

Due to the continuous development of the product during the manufacturing process, the descriptions provided here may not fully correspond to your TV, this is quite normal and the actual content of your TV is determined. The manual describes all the functions of this model, however your TV may not necessarily have all the functions.

6.2. Picture Menu (Picture)

1. Press the **MENU** button to open the main menu on the screen.
2. Press the ▲/▼ button to select **Picture (Picture)**.
3. Press the ▶ button to enter the **Picture (Picture)** submenu.
4. Likewise you can press the **PICTURE** button on the remote control to enter the picture settings menu.

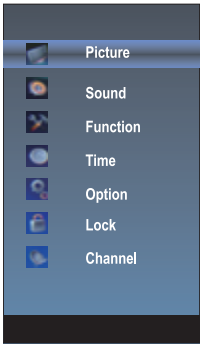

6.2.1. Picture Mode (Picture mode)

Your television has 4 picture setting modes (Sport, Normal, Fine, User), which are preset at the factory. Only the User mode can be adjusted according to personal preferences by setting the contrast, brightness, saturation and sharpness.

1. Press the ▲/▼ button to select **Picture Mode (Picture mode)**.
2. Press the ▲/▼ button to select one of the picture mode options.

Sport: Select this mode when watching a sports broadcast.
Normal: Select this mode when watching in normal conditions.
Fine: Select this mode when watching in a dark room.
User: Select this mode and set the values according to your personal preferences (see User picture settings).

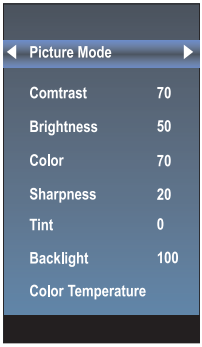

User picture settings (Contrast, brightness, saturation, sharpness, hue)

Set the picture settings according to you personal preferences.

1. Use the ▲/▼ buttons to select the respective item:
2. Use the ◀/▶ buttons to lower or increase the value of the selected item.

Note:
The saved values will be saved according to the selected item.

Copyright © 2015, Fast ČR, a. s.

Contrast: Set a lighter or darker ratio between objects and the background.
Brightness: Set the brightness of the picture.
Saturation: Set the colour saturation by lightening or darkening it.
Sharpness: Set the sharpness of the picture.
Hue: Set the hue of the picture (you can only adjust this in NTSC mode).

6.2.2. Backlight (backlight)

You can change the brightness of the whole screen according to your preferences.

1. Press the ▲/▼ button to select **Backlight (Backlight)**.
2. Use the ◀/▶ buttons to increase or decrease the backlight intensity.

6.2.3. Colour Temperature (Colour temperature)

You can change the colour temperature of the whole screen according to your preferences.

1. Press the ▲/▼ button to select **Colour temperature (Colour temperature)**.
2. Press the ▲/▼ button to select one of the colour temperature options.

Cold: The white colour is cooler (blueish).
Standard: The white colour is natural white.
Warm: The white colour is warmer (reddish).

6.2.4. RGB Range (RGB range)

Use the ▲/▼ buttons to select the RGB Range (RGB range) mode: change the brightness and saturation to achieve better picture quality. Press the ▲/▼ button to select **Full (Full)** or **Limited (Limited)**.

> **Note**:
> This function is only available in HDMI mode, therefore select the required settings according to DVD pre-settings/STB.

6.3. Sound Menu (Sound)

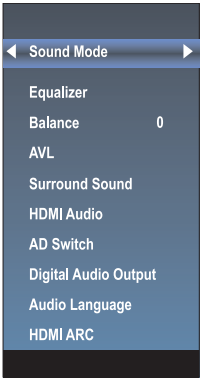

1. Press the **MENU** button to open the main menu on the screen.
2. Press the ▲/▼ button to select **Sound (Sound)**.
3. Press the ▶ button to enter the **Sound (Sound)** submenu.
4. Likewise you can press the **SOUND** button on the remote control to enter the sound settings menu.

6.3.1. Sound Mode (Sound mode)

Select a sound mode while watching the television.
Your television has 5 sound setting modes (Standard, Music, Film, Sport, User), which are preset at the factory.

1. Press the ▲/▼ button to select **Sound Mode (Sound mode)**.
2. Press the ▲/▼ button to select one of the sound mode options.

Copyright © 2015, Fast ČR, a. s.

Standard: Select the normal sound mode.
Music: Provides a clean and live sound for listening to music.
Film: Provides a clean and full sound for watching films.
Sport: Accentuates bass over other tones.
User: Set the sound settings according to your personal preferences.

6.3.2. Equaliser

It can only be set in the User mode.

1. Press the ▲/▼ button to select **Equaliser (Equaliser)**.
2. Use the ◄/► buttons to lower or increase the value of the selected item.

6.3.3. Balance (Balance)

If the volume of the left and right loudspeakers is not balanced, you can use this function to adjust it according to your personal preference.

1. Press the ▲/▼ button to select **Balance (Balance)**.
2. Use the ◄/► buttons to lower or increase the value of the selected item.

6.3.4. AVL (Automatic volume level)

Every broadcast channel has its own signal conditions and it is uncomfortable for the user to adjust the volume every time a channel is changed. The AVL (Automatic volume level) function automatically sets the volume of the selected channel as required by lowering the sound output if the signal is stronger or conversely increasing the sound output if the signal is weak.

1. Press the ▲/▼ button to select **AVL (Automatic volume level)**.
2. Press the ▲/▼ buttons to select **On (On)** or **Off (Off)**.

6.3.5. Surround sound (Surround sound)

This function is used to turn on surround sound to achieve an improved sound effect.

1. Press the ▲/▼ button to select **Surround sound (Surround sound)**.
2. Press the ▲/▼ buttons to select **Surround (On)** or **Off (Off)**.

6.3.6. HDMI Audio (HDMI audio)

Select a sound source in HDMI and component.

6.3.7 AD Switch (AD switch)

Press the ▲/▼ button to select the option **AD Switch (AD switch)**, and then press the **ENTER** / ► button to enter the submenu. Here you can activate or deactivate it and thereby set the volume ratio.

6.3.8. Digital Audio Output (Digital audio output)

It is used to select the SPDIF mode. This option is only available in HDMI and DTV modes.

1. Press the ▲/▼ button to select **SPDIF Mode (SPDIF mode)**.
2. Press the ◄/► button to select **Auto (Automatic)** or **PCM**.

Copyright © 2015, Fast ČR, a. s.

6.3.9. Audio Language (Audio language)
Set the primary and secondary audio language.

6.3.10. HDMI ARC
Turn the HDMI ARC function on or off.

6.4. Function menu (Functions)
1. Press the **MENU** button to open the main menu on the screen.
2. Press the ▲/▼ button to select **Function (Function)**.
3. Press the ▶ button to enter the **Function (Function)** submenu.

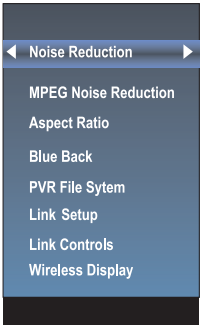

1.4.6. Noise Reduction (Noise reduction)
Press the ▲/▼ button to select one of the noise reduction options. Low/Medium/High/Automatic/Off. Select the correct mode that will correspond to the picture.

6.2.4. MPEG Noise Reduction (MPEG noise eduction)
Press the ◀/▶ button to select: off/low/medium/high. The picture will be better if you select the "High" mode.

6.3.4. Aspect Ratio (Side aspect ratio)
1. Press the ▲/▼ button to select **Aspect Ratio (Aspect ratio)**.
2. Use the ▲/▼ buttons to select a screen side aspect ratio: 4:3, Fullscreen, Film, Subtitles, Natural, Panorama, Full view.

6.4.4. Blue back (Blue background)
1. Press the ▲/▼ button to select **Blue back (Blue background)**.
2. Use the ▲/▼ buttons to turn the blue background option on or off. This function is only available in the ATV mode.

6.4.5. PVR File System (PVR file system)
1. Press the ▲/▼ button to select **PVR File System (PVR file system)**.
2. Press the **ENTER** or ▶ button to enter the submenu.

Connect the USB device to the USB port of your television before using the PVR function. **Selecting a disk**: Press the **ENTER** button to enter the submenu and use the ◀/▶ buttons to select a disk for the PVR function.

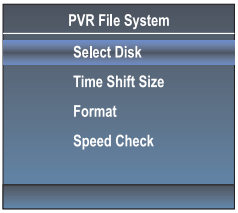

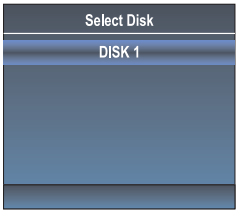

Copyright © 2015, Fast ČR, a. s.

PVR file system: Press the **ENTER** button to check whether the disk is suitable for the PVR function.
USB: This will be displayed if the USB device is suited for the PVR function.
Initial formatting: Press the **ENTER** button to enter the formatting menu.

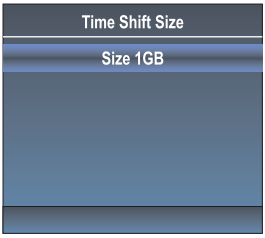

Time shift size: Displays the used PVR function system.
Check speed: Displays the reading and writing speed of the device. We recommend using devices with speeds up to 4500 kB/s.

WARNING:

1. If you are using the PVR function for the first time, it is necessary to format the inserted USB device, therefore backup the data stored on the USB device because formatting will destroy all data. We recommend the use of a special USB devices for the PVR function. Do not edit PVR files on a computer.
2. The times are not exact, they are only indications.

PVR Menu
If the digital channel has a signal, press the ■/● button to enter the main PVR menu.

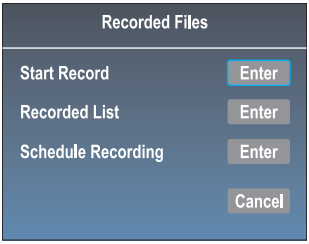

1. Use the ▲/▼ buttons to select **Start Record (Start recording)**. If the storage device is ready, press the **ENTER** button to start recording.
   The recording menu will disappear after approximately 5 seconds, press the **EXIT** button to open it.



   During the recording, press the ■/● button again, then choose to end the recording or to continue.
2. Use the ▲/▼ buttons to select **Recorded List (List of recordings)**. If the storage device is ready, press the **ENTER** button to check the list of recordings.

Copyright © 2015, Fast ČR, a. s.

1) Use the ▲/▼ buttons to select a recording.
2) Press the **ENTER** button of the ▶/❚❚ button to play the selected file.
3) Press the **green** or yellow button to mark one or multiple files.
4) Press the red button to delete the selected file.
5) While playing a recording, press the ◀◀/▶▶ button to quickly scroll forward or reverse.
6) If more than 1 file is marked, then during playback press the ⏮/⏭ button to play the previous or next file.

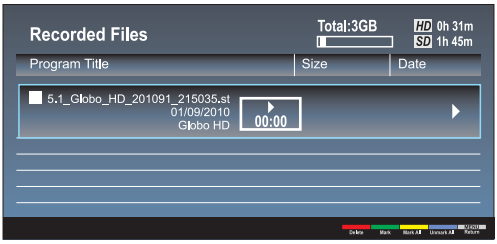

3. Use the ▲/▼ buttons to select **Schedule Recording (Schedule a recording)**.
   A list of the planned recordings will be shown in the planned recordings menu.
   Press the **ENTER** button to select one of the planned recordings.

1) Press the red button to delete the selected item.
2) Press the yellow button to edit the selected item.
3) Press the **blue** button to add a new planned recording.

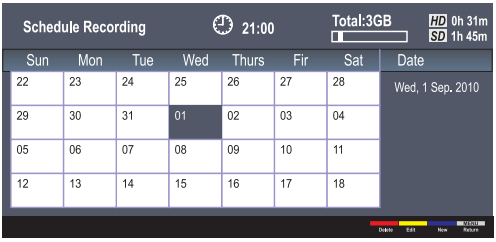

The TV will be without sound and turned off during a planned recording, then press the power button to turn on the television.

Note:
The recording time cannot be overextended, otherwise the previous recording would be overwritten.

4. In the DTV mode, press the ▶/❚❚ button to pause the playback of the recording, press again to resume playback. This is a time shift. While paused the picture is temporarily saved to disk, the duration of the pause is affected by the memory capacity of the disk.

Copyright © 2015, Fast ČR, a. s.

This function supports fast forward and fast rewind. Use the ◀◀/▶▶ buttons to fast forward or fast rewind.

5. In the EPG Menu, press the red button to enter the manual recording mode. Use the ◀/▶ buttons to select in the manual recording mode from Automatic, Once, Daily and Weekly. If the mode is not Automatic, use the ▲/▼ buttons to select the start and finish time of the manual recording.

6.4.6. Link Setup (Link setup)

1. Press the ▲/▼ button to select **Link Setup (Link setup)**.
2. Press the **ENTER** or ▶ button to enter the **Link Setup (Link setup)** submenu.

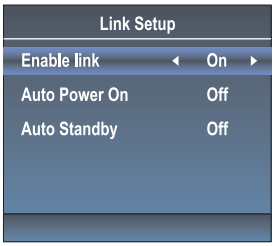

Activating the link: Use the ◀/▶ buttons to activate or deactivate the link setting.
Auto Power on (Automatic power on) When this function is activated and the TV is in stand-by mode, you can turn on the DVD and TV at the same time.
Auto Standby (Automatically switch to stand-by mode): If this function is activated and the TV is turned on, you can switch both the TV and DVD to stand-by mode.

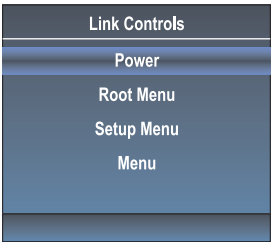

6.4.7. Link controls

This function is only available in the HDMI mode.

1. Press the ▲/▼ button to select **Link Controls (Link controls)**.
2. Press the **ENTER** or ▶ button to enter the **Link Controls (Link controls)** submenu.
   If the CEC link is successful, you can control the DVD through the TV.

Copyright © 2015, Fast ČR, a. s.

6.4.8. Wireless connection

This function displays the wireless connection of the device (peer-to-peer) in the standard format via a Wi-Fi connection, similar as with Bluetooth.

1. Press the ▲/▼ button to select the option **Wireless Display (Wireless connection)**.
2. Press the ▶ or **ENTER** button to confirm.

6.5. Time menu (TIME)

1. Press the **MENU** button to open the main menu on the screen.
2. Press the ▲/▼ button to select **Time (Time)**.
3. Press the ▶ button to enter the **Time (Time)** submenu.

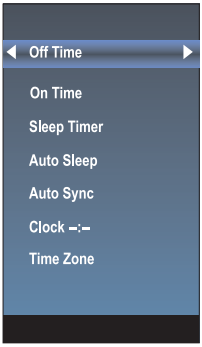

6.5.1. Off Time (Off time)

To enter the off time submenu, press the ▶ or **ENTER** button, set the day and time that the TV is to turn off.

6.5.2. On Time (On time)

To enter the On time submenu, press the ▶ or **ENTER** button, set the time that the TV is to turn on if the television is in stand-by mode. You can directly select the day of the week.

6.5.3. Sleep timer (Sleep timer)

1. Press the ▲/▼ button to select **Sleep Timer (Sleep timer)**.
2. Repeatedly press the ▲/▼ buttons to select a time after which the television will automatically switch to the stand-by mode (Off, 10 min, 20 min, 30 min, 60 min, 90 min, 120 min, 180 min, 240 min).

Notes:
The sleep timer that you have set will be cancelled if the television is turned off or the electrical power supply is interrupted.
A message will appear on the television screen 60 seconds before it is turned off. Press any button to cancel the off timer function.

6.5.4. Auto Sleep (Auto sleep)

Use the ▲/▼ buttons to select the Auto sleep function. If no signal is registered and this function is activated, the TV will turn itself off within 10 minutes. If the source is VGA, the TV will turn itself off after only 15 seconds if no signal is registered.

Note:
This function is not available in the USB mode.

Copyright © 2015, Fast ČR, a. s.

6.5.5. Auto Sync (Automatic synchronisation)
You can edit the clock of your television in manual mode. In the automatic mode the time is detected via the DTV signal.

6.5.6. Clock (Clock)
If the automatic synchronisation function is activated, the time will be detected via the DTV signal; it will be necessary to set the time if the automatic synchronisation function is deactivated.

6.5.7. Time Zone (Time zone)
Select this option to edit the time zone of the television.
1. Press the ▲/▼ button to select **Time Zone (Time zone)**.
2. Press the ▲/▼ button to select a time zone.

6.6. Option Menu (Options)

1. Press the **MENU** button to open the main menu on the screen.
2. Press the ▲/▼ button to select **Option (Options)**.
3. Press the ▶ button to enter the **Option (Options)** submenu.

6.6.1. OSD Language (OSD language)
1. Use the ▲/▼ buttons to select **OSD Language (OSD language)**.
2. Press the **ENTER** or ▶ button to select an OSD language.

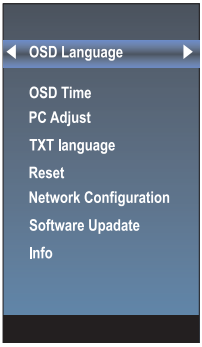

6.6.2. OSD Time (OSD time)
Set the time after which the OSD will be shown on the screen.

6.6.3. PC Adjust (PC Settings)
This option is only available in the VGA mode.
1. Press the ▲/▼ button to select **PC Adjust (PC settings)**.
2. Press the **ENTER** or ▶ button to show the computer settings menu.

Auto Adjust (Automatic adjustment): Select this function to automatically setup the TV for the input VGA video signal.
The phase, time and position will be set automatically.
Horizontal Pos (Horizontal position): Set the horizontal position of the picture.
Vertical Pos (Vertical position): Set the vertical position of the picture.
Size/Phase (Size/Phase): Eliminate or reduce picture interference.

6.6.4. TTX Language (TTX language)
1. Use the ▲/▼ buttons to select **TTX Language (TTX language)**.
2. Use the ◀/▶ buttons to select a teletext language.

Copyright © 2015, Fast ČR, a. s.

6.6.5. Reset
1. Press the ▲/▼ button and select **Reset**.
2. Press the ▶ or **ENTER** button to confirm.
3. Select **Yes (Yes)** to reconfirm, the television will turn off automatically and the factory settings will be restored.

6.6.6. Network Configuration (Network configuration)
More information further in the user's manual «Network configuration».

6.6.7. Software Update (Software update)
If it is necessary to update the software, download the new software on to a USB device and insert the USB device in your television's slot, then proceed as follows.
1. Press the ▲/▼ button to select **Software Update (Software update)**.
2. Press the ▶ or **ENTER** button to confirm.
3. Select **Yes (Yes)** to reconfirm, the software update will start, wait several minutes until the updating process is finished, do not turn off the television, it will turn itself off after finishing the update.

6.6.8. Info (Information)
Serves to display information about the software.

6.7. Lock menu (Lock)

The lock function automatically blocks programs the content of which is inappropriate for children. The user must first enter a password before unlocking and watching the channel.

1. Press the ▲/▼ button to select **Lock (Lock)**.
2. Press the **ENTER** or ▶ button to enter the **Lock (Lock)** submenu. The message for password entry will appear on the screen **Enter Password**, enter a valid 4-digit password to enter the **Lock (Lock)** submenu (the default and universal password is 0000, respectively 1980).

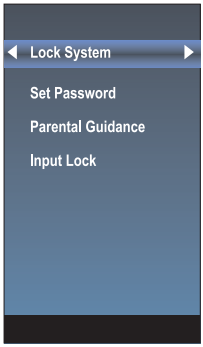

6.2.7. Set Password (Set password)
1. Press the ▲/▼ button to select **Set Password (Set password)**.
2. Enter a valid 4-digit password to enter the **Set Password (Set password)** submenu. Enter a new 4-digit password. As soon as the new password is entered, the cursor will automatically move to the password confirmation field, re-enter the new password and then the password will be saved to memory.
   If a channel is locked, you can also press the **MENU**, **INFO**, etc. button. Then press the ◀/▶ buttons to open the password input screen.

Copyright © 2015, Fast ČR, a. s.

6.7.3. Parental Guidance (Parental control)

This function is only available in the DTV mode.

1. Press the ▲/▼ button to select **Parental Guidance (Parental control)**.
2. Use the ▲/▼ buttons to select the level of parental control: off, 10, 12, 14, 16, 18.

6.4.7. Input Lock (Entry lock)

1. Press the ▲/▼ button to select **Input Lock (Input lock)**.
2. Press the ▶ button to display the input lock menu. In the input lock menu use the ▲/▼ buttons to activate or deactivate the input lock option.

6.8. Channel Menu (Channel)

Before scanning for available channels it is necessary to define the type of input signal (antenna or cable).

1. Press the **MENU** button to open the main menu on the screen.
2. Press the ▲/▼ button to select **Channel (Channel)**.
3. Press the **ENTER** or ▶ button to enter the **Channel (Channel)** submenu.

1.8.6. Auto Search (Auto tuning)

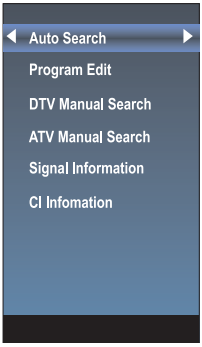

1. Press the ▲/▼ button to select **Auto Search (Auto tuning)**.
2. Press the ▶ or **ENTER** button to confirm. Then a dialogue box will appear on the screen. Select **Start** to start scanning or **Cancel** to cancel the selection. During the scanning process, press the **EXIT** button to exit the scanning menu. Press the **MENU** button to skip to DTV tuning when tuning a DTV channel, to skip ATV tuning when tuning an ATV channel.
3. After tuning all available channels, they will be saved to memory and the tuning menu will disappear from the screen.

6.2.8. Program Edit (Editing of channels)

After scanning the channels, select **Program Edit (Editing of channels)**, press the **ENTER** button to enter the submenu, where you can edit, delete or move the channels.

Blue skip button

This function enables the selected channel to be skipped. When scrolling through the channels using the ▲/▼ buttons on the remote control or the control panel of the television, the selected and marked channels will be skipped.

1. Select a channel that you wish to mark for skipping in the channel edit menu.
2. Press the **blue** button and the skip icon will appear on the left of the channel and this will mark the channel.

Copyright © 2015, Fast ČR, a. s.

3. To cancel the skip function, enter the channel edit menu, select a channel that is marked with the skip icon, press the **blue** button, the skip icon will disappear and the channel will no longer be skipped.

Red delete button

This function enables the selected channel to be deleted.

1. Select a channel that you wish to delete in the channel edit menu.
2. Press the red button and the channel will be deleted.

Yellow favourites button

This function will help you save a channel into the favourite channels list.

1. Select a channel which you wish to save in the favourites list.
2. Press the yellow button and the favourites icon will appear on the left of the channel and thereby the channel will be saved in the favourites list.
3. To cancel the favourites function, enter the channel edit menu, select a channel that is marked with the favourites icon, press the yellow button, the favourites icon will disappear and the channel will no longer be in the favourites list.

Green block button

This function enables the selected channel to be blocked.

1. Select a channel that you wish to lock (block) in the channel edit menu.
2. Press the **green** button and enter a valid password, a lock icon will appear on the left of the channel.
3. Press the **green** button again and the channel will be unlocked (unblocked).

6.3.8. DTV Manual Search (Manual digital tuning)

Enter a number and them press the **ENTER** button to select a DTV channel.

6.4.8. ATV Manual Search (Manual analogue tuning)

1. Press the ▲/▼ button to select **ATV Manual Search (Manual analogue tuning)**.
2. Press the ▶ or ENTER button to enter the submenu.

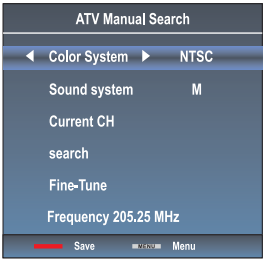

Color System (Colour system)

1. Press the ▲/▼ button to select the first item.
2. Press the ◀/▶ button to select a colour system.

Sound System (Sound system)

Select **Sound System (Sound system)** and press the ◀/▶ buttons on the remote control or the control panel.

Current CH (Current ch.)

1. Press the ▲/▼ button to select the second item.
2. Press the ◀/▶ button to select the current channel.

Copyright © 2015, Fast ČR, a. s.

Search (Scan)

Use the ▶ button to launch the channel scan from the lowest to the highest frequency and use the ◀ button to start the scan from the highest to the lowest frequency. If you find a channel, the scan will be paused and you can press the button again to resume scanning for other channels after saving the found channel.

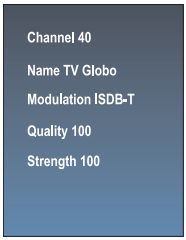

Fine Tune (Fine tuning)

1. Press the ▲/▼ button to select the third item.
2. Use the ◀/▶ buttons to select a better frequency for the current channel.

6.8.5. Signal Information (information about the signal – only in DTV mode)

1. Press the ▲/▼ button to select **Signal Information (information about the signal)**.
2. Press the **ENTER** or ▶ button to show information about a DTV channel.

6.8.6. CI Information (information about CI – only in DTV mode)

1. Press the ▲/▼ button to select the option **CI Information (CI Information)**.
2. Press the **ENTER** or ▶ button to display information about a DTV channel.

Copyright © 2015, Fast ČR, a. s.

7. Network configuration

1. Press the **MENU** button to enter the menu and select **Option (Options)**, press the **ENTER** or ▶ button again to enter the menu.

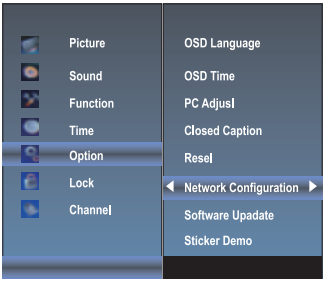

2. Select **Network Configuration (Network configuration)** and press the **ENTER** or ▶ button to enter the menu.

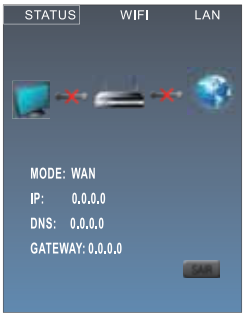

3. If a wire network is used or if you have selected the dynamic IP address setting, select "DHCP" in the network configuration menu, then select **Setting (Settings)** and press the **ENTER** button. If you selected the static IP address setting, select **Static (Static)** in the network configuration menu, then set the IP, Netmask, Gateway and DNS. As soon as the settings are complete, select **Setting (Settings)** and press the **ENTER** button.

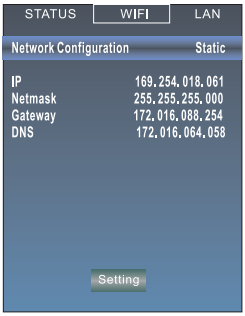

Copyright © 2015, Fast ČR, a. s.

4. If the message **Success (Success)** appears, a green "WLAN" will be lit in the top right corner, meaning that the connection to the network was successful, if **Fail (Error)** appears, then it means that it is not possible to connect to the network, therefore check whether the cables and the router are correctly connected.

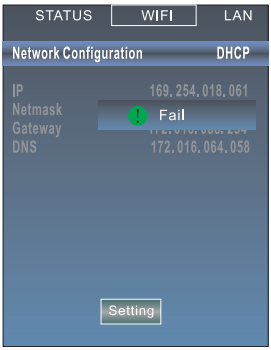

5. Select "WIFI" in the network configuration menu before using a WIFI connection.

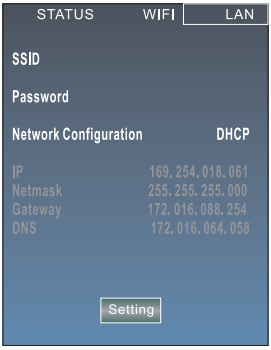

6. Select SSID, then press the **ENTER** button and the found WIFI network will appear on the right.

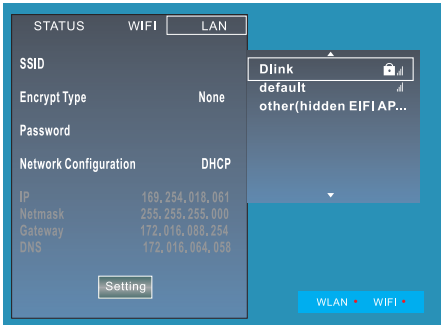

Copyright © 2015, Fast ČR, a. s.

7. Select a network to which you wish to connect, press the **ENTER** button to confirm. Select the item for entering a valid password, press the **ENTER** button, then in the right part a keyboard will appear for the entry of the password.
Then select dynamic IP address or set the static IP address manually in the network configuration menu.

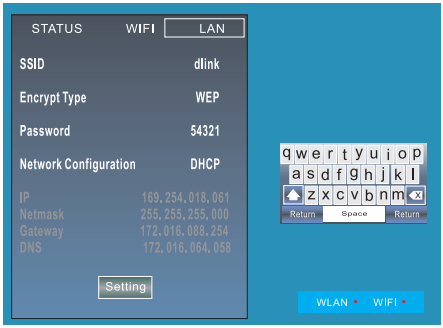

Copyright © 2015, Fast ČR, a. s.

8. Internet

Press the **INTERNET** button to enter the internet internet interface.

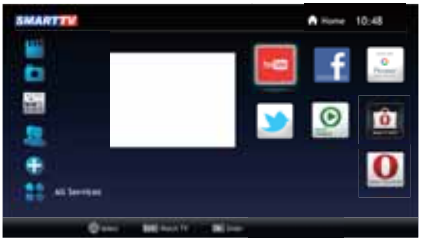

8.1 YouTube

1. Use the direction buttons to select the button, then press the **ENTER** button to enter YouTube.

2. Use the direction buttons to select a video and press the **ENTER** button to start playback. Press the **MENU** button to exit the playback.
3. Press the ▼ button to open or close the control menu during playback.

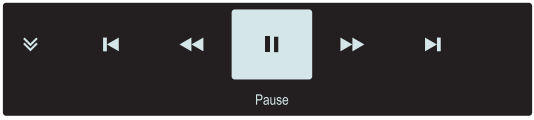

4. Press the ▲ button to enter the search interface, enter a key word and then press the **OK** button to search for a video.

Copyright © 2015, Fast ČR, a. s.

8.2. Facebook

1. Use the direction buttons to select the , poté stiskněte button, then press the **ENTER** button to enter Facebook.

2. Enter the correct email address and password, select **log in** and press the **ENTER** button to log in.

3. Use the direction buttons to view pages and press the **ENTER** button to display them. Press the **MENU** button to return to the main menu. Press the **EXIT** button to exit from Facebook.

Red button: log in or log out of Facebook.
Green button: refresh the current page.
Yellow button:: „like" mark (I like it) or „unlike" (I don not like it).
Blue button: show comments and add a comment.

Copyright © 2015, Fast ČR, a. s.

8.3. Twitter

1. Use the direction buttons to select the button, then press the **ENTER** button to enter Twitter.

2. Enter the correct email address and password, select **Authorize app** and press the **ENTER** button to log in.

3. Use the direction buttons to view pages. Press the **MENU** button to return to the main page and press the **EXIT** button to exit Twitter.

Red button: log in or log out of Twitter.
Green button: refresh the current page.
Yellow button: write new content.
Blue button: search.

Copyright © 2015, Fast ČR, a. s.

8.4. Picasa

1. Use the direction buttons to select the button, then press the **ENTER** button to enter Picasa.

2. Press the **red** button to open the log in screen, enter the correct email address and password and then select **Log In**, press the **ENTER** button to log in.

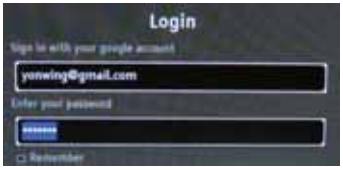

3. Use the direction buttons to view pages and press the **ENTER** button to display them.

Red button: log in or log out of Picasa.
Green button: refresh the current page.
Yellow button: search for photos.
Blue button: add a comment.

4. On the page **People (People)** press the **green** button to delete people or the **blue** button to add friends.

Copyright © 2015, Fast ČR, a. s.

8.5. DLNA

1. Use the direction buttons to select the button, then press the **ENTER** button to enter DLNA.
2. You can open an audio or video file on your computer on the same link if you are sharing it.

Copyright © 2015, Fast ČR, a. s.

9. Digital player

Your television is equipped with one USB digital media player port. The television supports USB 1.1/2.0, including flash disks, USB harddisks and digital cameras. It supports functions like: Display of images. Playback of music files, video files, showing of text.

Attention:
1. To prevent a negative viewing experience, use only a good quality and short USB cable.
2. It is not guaranteed that the player will support all types of files and devices.

Explanation:
1. Within the USB channel you can only use the remote control.
2. The playback control menu serves as an entry to the playback interface, here the menu with the control buttons will be shown.

Supported formats

Data	Format
Photo	JPG, JPEG, PNG, BMP
Music	MP3, AAC
Video	MPG, MPEG, MP4, MKV, MOV
Text	TXT

Description of the remote control functions

Button	Function
AUDIO	Switch track (only for video)
SUBTITLE	Switch subtitles (only for video)
INFO	Show / hide film info (only for video)
YELLOW	AB repeat playback (only for video)
RED	Skip to a time (only for video)
Up arrow	Page up
Down arrow	Page down
▶/❚❚	Play / pause
■/●	Stop
⏮	Previous track
⏭	Next track
◀◀	Fast rewind
▶▶	Fast forward

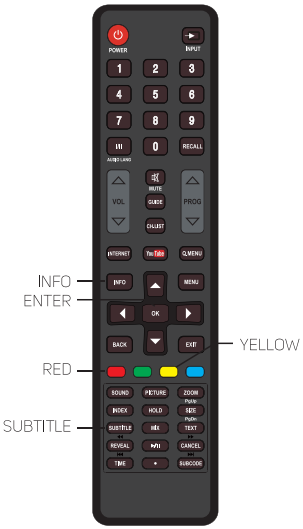

Copyright © 2015, Fast ČR, a. s.

10. Care and maintenance

Premature susceptibility to breakdown can be prevented. Careful and regular cleaning can prolong the lifetime of your television. Before cleaning, do not forget to turn off the television and to pull the power cord out of the power socket.

Cleaning the screen

1. You can effectively remove dust from the screen in the following manner. Dampen a fine cloth in lukewarm water with an addition of a laundry conditioner or dish-washing detergent. Wring out the cloth until almost dry and use it to clean the screen.
2. Make sure that the screen is not wet, and allow it to dry naturally before turning it on.

Cleaning other parts

To clean away dirt and dust, wipe the other parts of the television using a lint-free fine dry cloth. Do not use a dampened cloth.

Taking out of operation for an extended period

If you will not be using the television for an extended period of time (e.g. during a holiday), it is advisable to pull the power cord out of the power socket to prevent the television from being damaged as a result of a lightning strike or current spike.

Copyright © 2015, Fast ČR, a. s.

11. Troubleshooting

In the event that you come across difficulties, proceed according to the solutions to the individual symptoms described below. The following symptoms may be caused rather by inappropriate settings than a real malfunction of the appliance. If problems persist, please contact a service centre.

No picture and audio.

1. Check that the fuse and the circuit fuse is in order.
2. Connect a different electronic appliance to the power outlet to check whether the power outlet is in order or not.
3. The plug on the power cord is incorrectly inserted into the power outlet.
4. Check the signal source.

No colours.

1. Check the colour system settings.
2. Set the colour saturation.
3. Try another channel. You may be watching a black and white program.

Remote control is not working.

1. Replace the batteries.
2. The battery is not correctly installed.
3. The TV is not connected to the electrical power grid.

No picture, but sound is normal.

1. Set the brightness and contrast.
2. Broadcasting error.

Normal picture, no sound.

1. Press the button to increase volume.
2. You pressed the MUTE button, press the MUTE button again to renew the volume.
3. Change the audio system.
4. Broadcasting error.

Irregular waves on the screen.

The picture is suffering from interference, e.g. from cars, lighting or hair dryer. Move the antenna to limit interference.

Copyright © 2015, Fast ČR, a. s.

Snowing and interference
The antenna is located in a location with a weak television signal, dots may appear on the picture. If the signal is extremely weak, it is necessary to install a special antenna amplifier to improve signal reception.

1. Change the location and the facing direction of the indoor/outdoor antenna.
2. Check the antenna connection.
3. Perform fine tuning.
4. Try another channel. Broadcasting error.

Ignition
Black dots or horizontal stripes on the picture, the picture is shivering or trembling. This effect is caused by interference caused by the starting of a car, neon lamps, electric drills or other electrical equipment.

Ghosts on the screen
Ghosts are caused by a television signal that is following 2 paths. One is the direct path, the other is reflected from high buildings, hills or other objects. Changing the facing direction or position of the antenna will improve the reception.

Radio-frequency interference
This interference produces moving waves or diagonal bands and in certain cases results in loss of contrast. Identify and remove the source of the radio-frequency interference.

Note:
If the problem persists, turn off the television and contact an authorised service centre.

WARNING:

Never use a damaged television or a television with a damaged power cord. Never attempt to repair the television yourself.

Copyright © 2015, Fast ČR, a. s.

12. Technical specifications

Model	SLE 3282M4
Panel size	32"
Consumption	55 W
Standby power consumption	≤0.5 W
Nominal voltage	110-240 V~ 50/60 Hz
Remote control	Yes, 2x AAA batteries
VESA wall mount	200 x 200
Dimensions with stand (L × W × H)	734.2 x 180 x 489.2 mm
Dimensions w/o stand (L × W × H)	734.2 x 90 x 443 mm
Dimensions of package (L × W × H)	816×165×523mm
Weight netto with stand	6.2 kg
Weight netto w/o stand	5.2 kg
Connections	
RF IN	1
AV in	1
SCART	1
Component YPbPr	1
VGA (D-Sub 15 pin)	1
HDMI	3 (compatible 1 MHL)
SPDIF coaxial	1
USB	1
USB supported formats	JPG, JPEG, PNG, BMP, MP3, AAC, MP4, H.264
CI slot	1
Other features	
WXGA resolution	1366 x 768
Brightness (cd/m2)	600
Aspect ratio	16:9
Dynamic contrast	1 000 000 :1
Response time (ms)	120:00:00
Colours	10bit

Copyright © 2015, Fast ČR, a. s.

Colour temperature settings	Standards, warm and cool
Viewing angle	H:178°,V:178°
Built-in tuner	Yes
Video system	Yes
Audio system	Yes
Stereo sound	Yes
Sound output	Yes
PVR recording to USB	Yes
Pitch correction	Yes
Progressive Scan	Yes
Time shift function	Yes
Electronic Programme Guide EPG	Yes
Teletext	Yes
Teletext pages	Yes
Comb filter	Yes
OSD menu	English/French/German/Italian/Spanish/ Czech/Slovak/Polish/Hungarian/ Romanian/Russian/Lithuania/Bulgarian
Zoom	16:9 / 4:3
Noise reduction	Yes
Timer off /on/sleep	Yes
Subtitles	Yes
Audio language	Yes
Channel list	Yes
Favourites list	Yes
Picture freeze	Yes
Radio	Yes
Lock	Yes
Parent lock	Yes
Hotel mode	Yes

Notes:
Technical specifications may change without prior notice.

Copyright © 2015, Fast ČR, a. s.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.

CE This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Copyright © 2015, Fast ČR, a. s.

SENCOR®

EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers
Visit www.sencor.eu for detailed information about authorized service centers.

Copyright © 2015, Fast ČR, a. s.